



## MXA6BA Troubleshooting Guide

### Unit will not turn ON

- Check fuse.
- Verify wiring is correct as described in manual.
- Verify you have 12V+ DC on the Yellow power wire.
- Check Ground.
- Check remote trigger wire is connected (REM) and receiving 12V+DC when necessary.
- Confirm the Deutsch connector is seated properly.

### No Sound

- Check **Volume, Balance, Fader & Mute** controls on stereo for proper settings.
- Check to make sure audio signal is connected to amp's input (either Speaker Level or Low Level).
- Check **Level, Crossover & Mode** settings on amp are correct, as described in manual.

### Distorted Sound

- See if distortion is present at all volume levels; if so, test with a known good speaker.
- If distortion only present at high volume levels, adjust volume and amp Level controls until distortion no longer present.

### Blows Fuses

- Power wires are backwards. Correct wiring as shown in manual.
- Internal problem with amp. Contact vendor for warranty assistance.

### Poor Bass Response

- Speakers out of phase. Check for correct speaker polarity.