

Technical Bulletin

Date Released: 06-20-2013

Tracking Number: TBREMJHD10CC-002

Model/Part No.: REMJHD10CC

Re: Use with JHD3630BT, JHD1630 & JHD1130

Details: The REMJHD10CC will control most basic functions of the JHD3630BT, JHD1630 & JHD1130, with the noted exceptions:

- All models:
 - The **PTY** and **TA** button have no function in regular Tuner mode.
- JHD3630BT & JHD1630 only:
 - In SiriusXM mode, the **AS/PS** button will scan through the station presets.
 - **S.MOD/ENTER** performs **INFO/ENTER** function only. It does not perform SiriusXM Mode selection.
 - No **DIRECT TUNE** or **CATEGORY** selection via remote.
 - Use #1-6 buttons for direct preset station access.
 - In USB mode, **AS/PS** button will bring up the folder search. Use **TUNE/SEEK** buttons to advance through list. Use **S.MOD/ENTER** to select.
 - In iPod mode, **AS/PS** button will bring up the folder search. Use **TUNE/SEEK** buttons to advance through list. Use **S.MOD/ENTER** to select.
- JHD3630BT only:
 - In BT Audio mode, use **TUNE/SEEK** buttons to advance track in current playlist. All other playlist functions must be performed by the BT Audio device.
 - In CD-MP3 mode, **AS/PS** button will bring up the folder search. Use **TUNE/SEEK** buttons to advance through list. Use **S.MOD/ENTER** to select.

